

MSI

# MIDI SHIP

## Faders controller

Multifunctional button:

1. Enter/exit Edit mode
2. Switch presets
3. Switch to HUI Mode

OLED display  
128x64 px

Encoder

Preset number

MIDI Values

MIDI Control Change (CC)

 

164 mm

Faders  
100 mm

84 mm

18 mm

Type-C

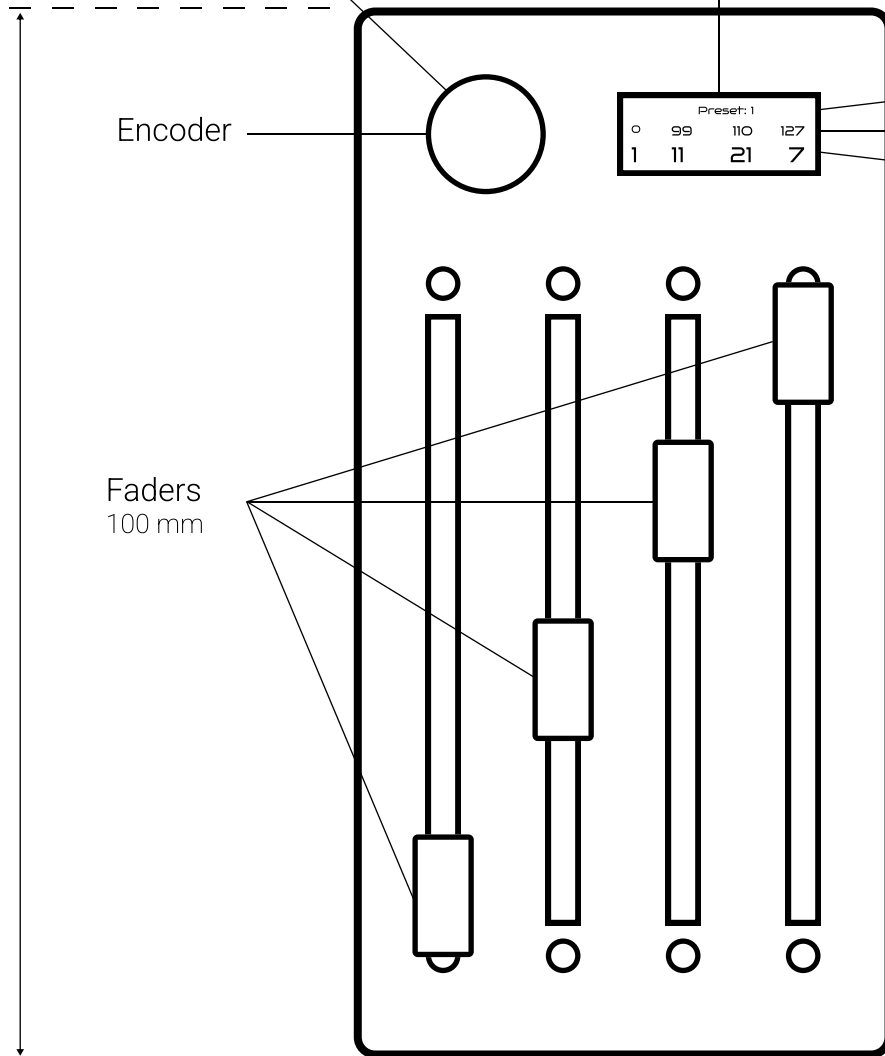



# Manual

1. To get started, connect your device using a USB/Type-C cable to your computer. The device is ready to use and will be automatically detected in your DAW as MIDISHIP-F. **ATTENTION:** If the device is receiving power but is not recognized in the DAW, change or check the cable.
2. By default, the MIDI Control Change (CC) faders are programmed to be 1/11/21/7 in each of the 10 presets. These values correspond to the Modulation/Expression/Vibrato/MIDI Volume controls and faders respectively, from left to right. You can adjust any CC value from 0 to 99 inclusive in each of the 10 presets.
3. By default, the MIDI Control Change (CC) of encoder is programmed to a value of 0 in each of the 10 presets. You can set any CC value from 0 to 119 inclusive in each preset.
4. To change the preset number, press the encoder button or rotate the encoder while holding the encoder button down. This principle also applies in CC editing mode.
5. To change the CC value, press the encoder button and hold for 2 seconds. After that, the controller will go into editing mode. The screen will display the inscription Edit CC.
6. To change CC values in edit mode, move the fader of the corresponding channel or rotate the encoder.
7. To exit the editing mode and save changes to all presets, press and hold the encoder button for 2 seconds. The screen will display Preset: N Saved, where N is the current preset number.
8. Any configured CC values are saved in the controller memory even after power is turned off. After power is turned on, you automatically enter the preset that you saved last before the device was disconnected from the power supply. The CC values you configured in other presets also remain saved.

