


MSI

# MIDI SHIP

## Potentiometers controller

Multifunctional button:

1. Enter/exit Edit mode
2. Switch presets
3. Switch to CC View mode
4. Switch to HUI Mode

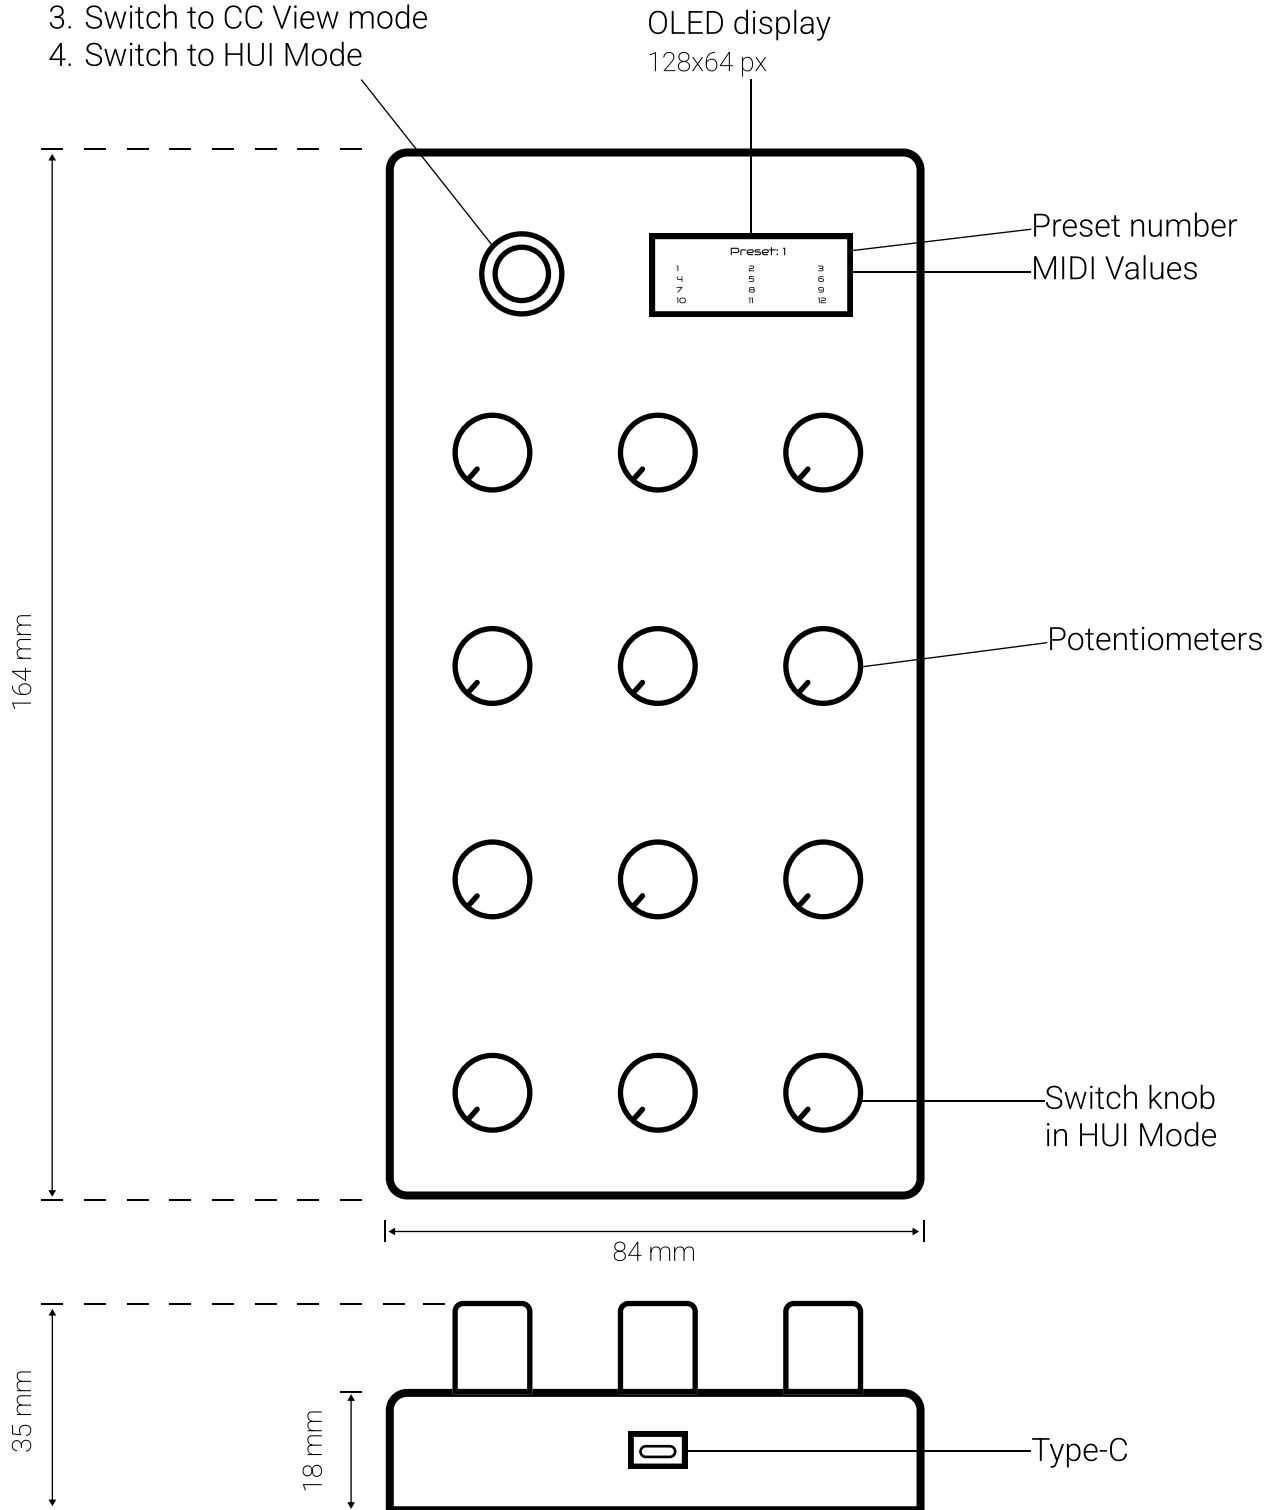



# Manual

1. To get started, connect the device to your computer using a USB/Type-C cable. The device is ready to work and will be automatically detected in your DAW as MIDISHIP-P. **ATTENTION:** If the device is receiving power but is not detected in your DAW, check or change the cable.
2. By default, MIDI Control Change (CC) values are programmed to 1/2/3/4/5/6/7/8/9/10/11/12 in each of the 10 presets. You can set any CC value from 0 to 127 inclusive in each of the 10 presets.
3. Switching presets is done by short pressing the multi-function button. To return to the previous preset, quickly press the multi-function button 4 times. This principle also applies in the CC editing mode.
4. To see the MIDI Control Change (CC) values of the preset you are currently in, quickly press the multi-function button twice. This will take you to the CC value display mode called CC View. To exit CC View, quickly press the multi-function button twice.
5. To change the CC value, press the multi-function button for 2 seconds. The controller will enter the edit mode.
6. To change CC values in edit mode, rotate the potentiometer of your choice.
7. To exit from edit mode, press and hold the multi-function button for 2 seconds.
8. Any configured CC values are saved in the controller's memory even after power is turned off. After power is turned on, you automatically get to the preset that you edited before the device was disconnected from the power. The CC values you configured in other presets are also remain saved.

