


MIDI SHIP Potentiometers controller



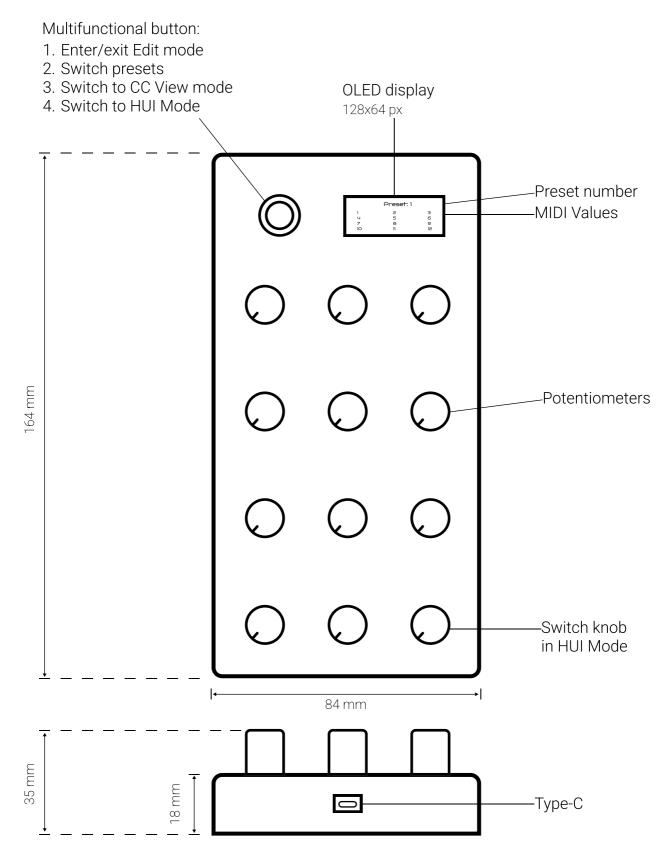

Manual

- 1. To get started, connect the device to your computer using a USB/Type-C cable. The device is ready to work and will be automatically detected in your DAW as MIDISHIP-P. **ATTENTION**: If the device is receiving power but is not detected in your DAW, check or change the cable.
- 2. By default, MIDI Control Change (CC) values are programmed to 1/2/3/4/5/6/7/8/9/10/11/12 in each of the 10 presets. You can set any CC value from 0 to 127 inclusive in each of the 10 presets.
- 3. Switching presets is done by short pressing the multi-function button. To return to the previous preset, quickly press the multi-function button 4 times. This principle also applies in the CC editing mode.
- 4. To see the MIDI Control Change (CC) values of the preset you are currently in, quickly press the multi-function button twice. This will take you to the CC value display mode called CC View. To exit CC View, quickly press the multi-function button twice.
- 5. To change the CC value, press the multi-function button for 2 seconds. The controller will enter the edit mode.
- 6. To change CC values in edit mode, rotate the potentiometer of your choice.
- 7. To exit from edit mode, press and hold the multi-function button for 2 seconds.
- 8. Any configured CC values are saved in the controller's memory even after power is turned off. After power is turned on, you automatically get to the preset that you edited before the device was disconnected from the power. The CC values you configured in other presets are also remain saved.



Manual

- 9. The controller also supports the HUI protocol. To enter the HUI Mode, press the multi-function button three times quickly. The screen will display HUI Mode. In this mode, you can control any programs that support the HUI protocol, such as Pro Tools and others. To immediately enter the HUI Mode after connecting the power, press and hold the multi-function button for 2 seconds. The screen will display HUI Mode Saved.
- 10. In HUI Mode you can change the volume with the potentiometers. The screen displays the values as in the DAW. These values will also change if you control the fader of the corresponding channel from the DAW. The channel and bank numbers are displayed on the controller screen. To change channels and banks, rotate the lower right potentiometer.
- 11. There are 8 banks in the HUI protocol. Each bank has 8 channels. That is, you can control 64 channels.
- 12. The multi-function button in HUI Mode works as MUTE and SOLO. To MUTE a channel, rotate the potentiometer of the corresponding channel and press the multi-function button. To SOLO a channel, move the potentiometer of the corresponding channel and press the multi-function button twice. SOLO and MUTE already work on the channel whose potentiometer you used last.
- 13. If you do not touch the potentiometers for 10 minutes, the controller goes into standby mode. The display goes out. To take the controller out of this mode, simply change the position of any potentiometer or press the multi-function button.