


MSI

MIDI SHIP

E - controller

Multifunctional button:

1. Enter/exit Edit mode
2. Switch presets
3. Switch to CC View mode
4. Switch to HUI Mode

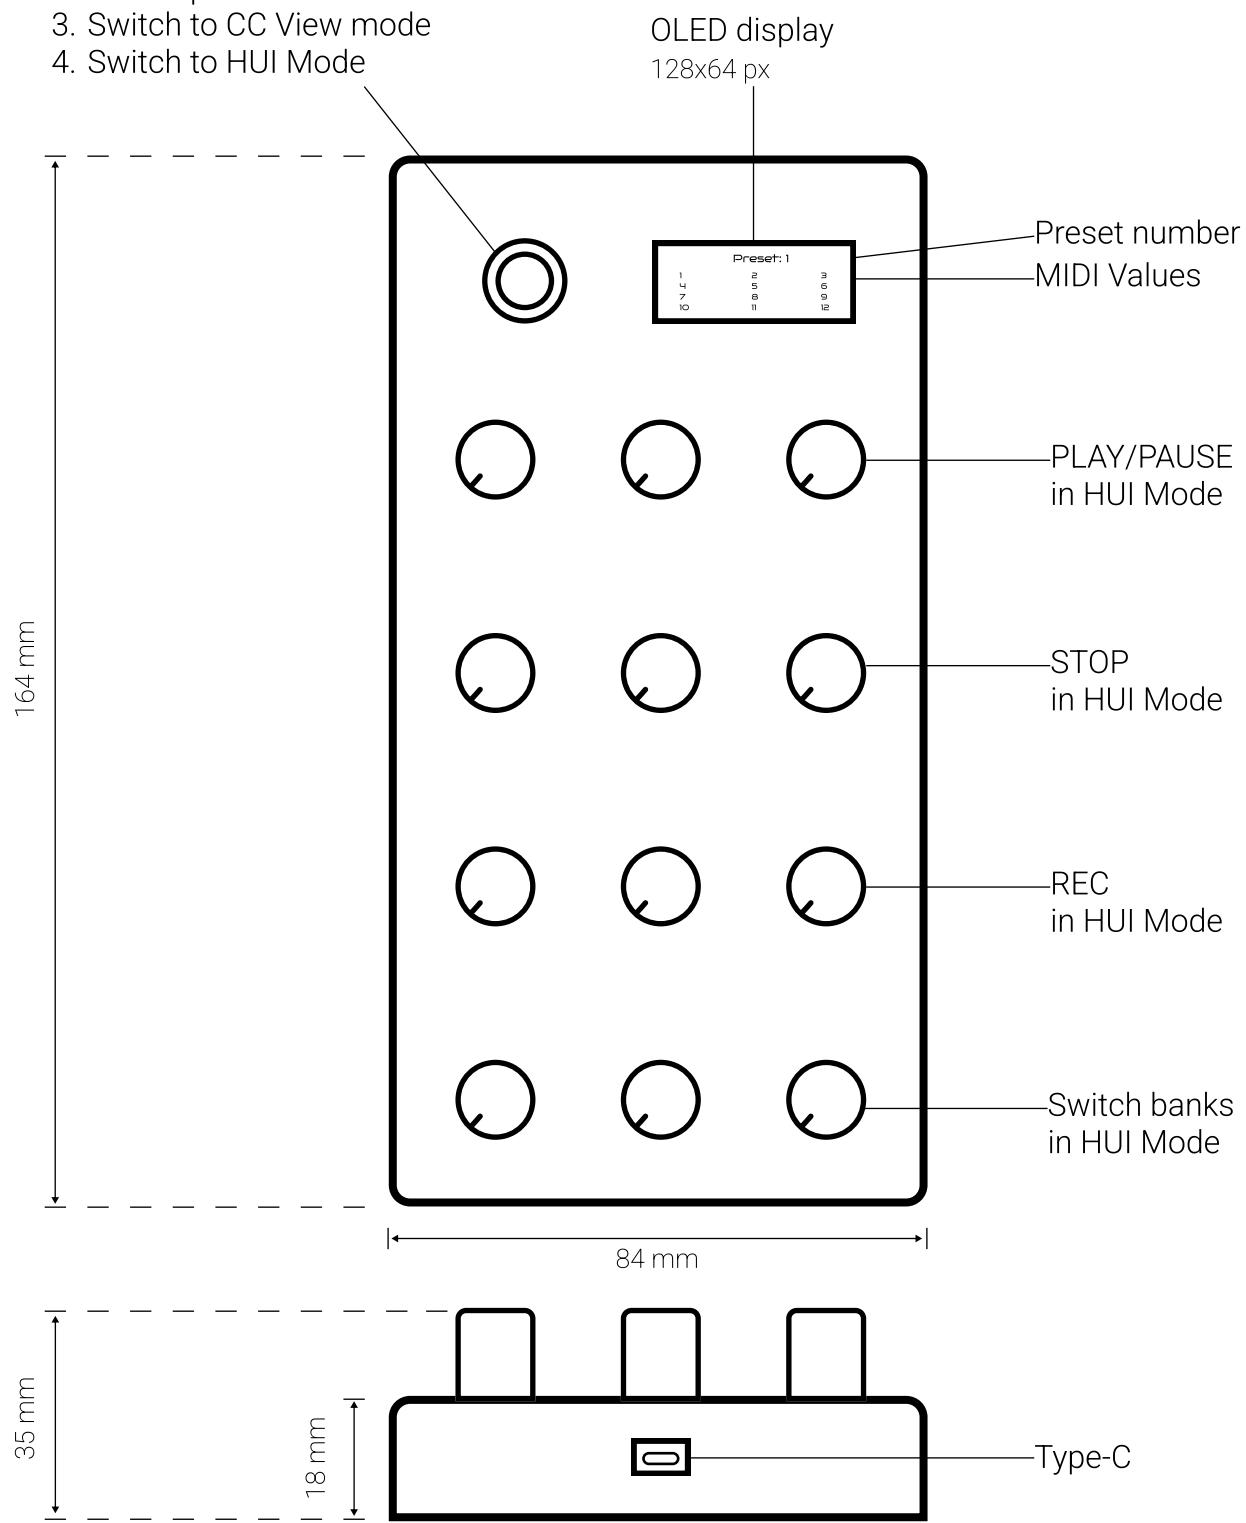



Manual

1. To get started, connect the device to your computer using a USB/Type-C cable. The device is ready to use and will automatically be detected in your DAW as MIDISHIP-E. **CAUTION:** If the device is receiving power but is not detected in your DAW, check or replace the cable.
2. Each encoder has 3 options for controlling parameters: 1) rotation, 2) pressing, 3) rotation and holding down pressing.
3. By default, MIDI Control Change (CC) values for rotation and press-and-hold are programmed to 1/2/3/4/5/6/7/8/9/10/11/12 in each of the 10 presets. You can configure any CC value from 0 to 127 inclusive in each of the 10 presets for both rotation and rotation holding down pressing, as well as pressing only.
4. Switching presets is accomplished by pressing the multi-function button. To return to the previous preset, quickly press the multi-function button four times. This principle also applies in CC editing mode.
5. To view the MIDI Control Change (CC) values of the current preset, quickly double-click the multi-function button. This will enter CC View. This mode also displays CC Hold and CC Btn values. To view CC Hold values, press and turn any encoder in either direction. To view CC Btn values, press any encoder. To return to CC View, turn any encoder in either direction. While in CC View, you can control Value parameters (0-127); however, changes to these parameters are not visible in this mode, as you see the CC values. To exit CC View, quickly double-click the multi-function button.
6. Для изменения значений СС при вращении, в режиме редактирования вращайте выбранную Вами ручку энкодера.
7. Для изменения значений СС при вращении с удержанием нажатия, в режиме редактирования нажмите и, удерживая, вращайте выбранную Вами ручку энкодера.
8. To change the CC values when pressed, in edit mode, press the encoder knob of your choice. The controller will display the word "Button." Then, rotate the selected encoder knob to change the CC value. To change the Value, press and hold the selected encoder knob.
9. To exit editing mode, press and hold the multifunction button for 2 seconds.
10. Any configured CC values are saved in the controller's memory even after power is turned off. After power is restored, you automatically enter the preset you were editing before powering off the device. CC values you configured in other presets are also saved.



Manual

11. The controller has a display mode and the ability to change the MIDI channel number (from 1 to 16). To access this mode, quickly press the multi-function button five times. To return to the normal view, quickly press the button five times.
12. In Edit CC mode, you can change the MIDI channel number. To do this, quickly press the multi-function button three times. To return to the previous MIDI channel, quickly press the button five times.
13. The controller also supports the HUI protocol. To enter HUI Mode, quickly press the multi-function button three times. The display will show "HUI Mode." In this mode, you can control any software that supports the HUI protocol, such as Pro Tools and others. To immediately enter HUI Mode after connecting power, press and hold the multi-function button for 2 seconds. The display will show "HUI Mode Saved."
14. In HUI Mode, you can use the encoders to adjust volume, pan, and solo or mute a channel. The screen displays the same values as in your DAW. These values will also change if you control the corresponding channel's fader from your DAW. The channel and bank numbers are displayed on the controller screen. To change banks, rotate the lower-right encoder. It's important that your controller is configured for both the Input and Output signals in your DAW.
15. The HUI protocol has 8 banks. Each bank contains 8 channels. This means you can control 64 channels.
16. To mute a channel, tap it. To solo a channel, double-tap it.
17. The right-hand encoders in HUI Mode control REC, STOP, PLAY, and PAUSE. To activate REC, press the second encoder from the bottom. Pressing it again stops REC but does not stop PLAY. To activate STOP, press the third encoder from the bottom. To activate PLAY, press the fourth encoder from the bottom. Pressing it again activates PAUSE.
18. To control the channel pan in HUI Mode, press and hold the encoder button of the selected channel.
19. If you don't touch the encoders for 10 minutes, the controller goes into standby mode. The display turns off. To exit this mode, simply move any encoder or press the multi-function button.